



4

1.4 Changing the side that the door opens from. Disconnect the refrigerator from the power outlet and empty the inside of the door.

Remove the upper hinge cover with a flat blade screwdriver (1.4.1). Loosen the screws and remove the hinge mechanism with help of a screwdriver (1.4.2).

Disconnect by pressing the connector tab (1.4.3). Remove the refrigerator door (1.4.4). Remove the controls with a screwdriver, prying it away using the grooves placed for that purpose (1.4.5).

Make a notch for the cable on the opposite side, as marked on the casing (1.4.6). Remount the control panel passing the cable through the notch you made (1.4.7)

Remove the screw cover from the centre hinge, loosen the screws and remove the hinge (1.4.8). Move the freezer door up (1.4.9).

Loosen the screws of the lower hinges and remove it. Change the position of the hinge axis and place it on the opposite side.

Place the lower freezer handle on the refrigerator door and the lower refrigerator handle on the freezer door, rotated 180°. Place the vertical handles on the opposite side rotating them 180° (1.4.11).

Rotate the self-closures and place the one from the refrigerator on the freezer and vice versa (1.4.12).

Position the freezer door (1.4.13) and attach the central hinge (1.4.14). Position the refrigerator door (1.4.15).

Place the closure mechanism in the upper hinge space on the opposite side (1.4.16). Put the cable through the upper hinge and rotation mechanism and plug it into the door connector (1.4.17).

Screw in the upper hinge (1.4.18) and put the cover in place (1.4.19)

